

## **2-In/2-Out 0-10 Volt Analog Rail Module**

M/N 6" C350

---

Instruction Manual J-3672-3

---

**RELIANCE**  
**ELECTRIC** 

The information in this user's manual is subject to change without notice.

**WARNING**

ONLY QUALIFIED ELECTRICAL PERSONNEL WHO ARE FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THIS EQUIPMENT AND THE HAZARDS INVOLVED SHOULD INSTALL, ADJUST, OPERATE, AND/OR SERVICE THIS EQUIPMENT. READ AND UNDERSTAND THIS MANUAL IN ITS ENTIRETY BEFORE PROCEEDING. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY.

**WARNING**

INSERTING OR REMOVING THIS PRODUCT OR ITS CONNECTING CABLES MAY RESULT IN UNEXPECTED MACHINE MOTION. POWER TO THE MACHINE SHOULD BE TURNED OFF BEFORE INSERTING OR REMOVING THE PRODUCT OR ITS CONNECTING CABLES. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY.

*AutoMax*®, *AutoMate*®, and *Reliance*® are registered trademarks of Reliance Electric Company or its subsidiaries.

*Galcon*® is a registered trademark of Galcon, Inc.

# Table of Contents

|            |   |            |
|------------|---|------------|
| <b>1.0</b> | <b>Introduction</b>   | <b>1-1</b> |
| 1.1        | Additional Information  | 1-1        |
| 1.2        | Related Hardware and Software   | 1-2        |
| <b>2.0</b> | <b>Mechanical/Electrical Description</b>  | <b>2-1</b> |
| 2.1        | Mechanical Description  | 2-1        |
| 2.2        | Electrical Description  | 2-3        |
| <b>3.0</b> | <b>Installation</b>   | <b>3-1</b> |
| 3.1        | Wiring  | 3-1        |
| 3.2        | Initial Installation  | 3-2        |
| 3.3        | Module Replacement  | 3-6        |
| <b>4.0</b> | <b>Programming</b>  | <b>4-1</b> |
| 4.1        | Analog Rail Module in AutoMate Systems  | 4-1        |
| 4.1.1      | Configuring the AutoMate Processor for Use with the Analog Rail Module          | 4-2        |
| 4.1.2      | AutoMate Programming in Rail Mode   | 4-6        |
| 4.1.3      | AutoMate Programming in Local Host Mode   | 4-8        |
| 4.1.4      | Analog In (A/I) and Analog Out (A/O) Instruction Blocks                         | 4-8        |
| 4.2        | Analog Rail Module in DCS 5000/AutoMax Systems                                  | 4-10       |
| 4.2.1      | Configuring the Analog Rail Module with a DCS 5000/AutoMax Remote I/O Host      | 4-10       |
| 4.2.2      | Configuring the Analog Rail Module with a Power Module Interface Processor Host | 4-11       |
| 4.2.3      | DCS 5000/AutoMax Programming  | 4-11       |
| <b>5.0</b> | <b>Diagnostics and Troubleshooting</b>  | <b>5-1</b> |
| 5.1        | Both LEDs on the Facade are Off   | 5-1        |
| 5.2        | The "COM OK" LED is Off   | 5-2        |
| 5.3        | Incorrect Data  | 5-3        |
| 5.4        | Constant Under-Range  | 5-4        |

# Appendices

## Appendix A

|                                |     |
|--------------------------------|-----|
| Technical Specifications ..... | A-1 |
|--------------------------------|-----|

## Appendix B

|                     |     |
|---------------------|-----|
| Block Diagram ..... | B-1 |
|---------------------|-----|

## Appendix C

|                               |     |
|-------------------------------|-----|
| Sample AutoMate Program ..... | C-1 |
|-------------------------------|-----|

# List of Figures

|   |      |
|---|------|
| Figure 1.1 - Analog Rail Module Hardware Configuration .....  | 1-3  |
| Figure 2.1 - Analog Rail Module Feedback .....  | 2-2  |
| Figure 2.2 - Typical Output Circuit .....   | 2-4  |
| Figure 2.3 - Typical Input Circuit .....  | 2-7  |
| Figure 3.1 - Mounting Dimensions .....  | 3-2  |
| Figure 3.2 - Typical Recommended Input and Output Shielding Methods .....   | 3-6  |
| Figure 4.1 - Input Signal Conversion .....  | 4-1  |
| Figure 4.2 - Configuration for Analog Rail Module with AutoMate 20 .....  | 4-2  |
| Figure 4.3 - Sample Configurations for Analog Rail Module<br>Connected Directly to AutoMate 30 or 40 .....              | 4-3  |
| Figure 4.4 - Sample Configuration for Analog Rail Module Connected<br>to AutoMate 30 or 40 Through Local I/O Head ..... | 4-4  |
| Figure 4.5 - Sample Configuration for Analog Rail Module<br>with AutoMate Local I/O Processor .....                     | 4-5  |
| Figure 4.6 - Sample Configuration for Analog Rail Module<br>with AutoMate Remote I/O Head .....                         | 4-6  |
| Figure 4.7 - Rail Mode Register Image for Input Channels .....  | 4-7  |
| Figure 4.8 - Rail Mode Register Image for Output Channels .....   | 4-7  |
| Figure 4.9 - Local Head Register Image for Input Channels .....   | 4-8  |
| Figure 4.10 - Local Head Register Image for Output Channels .....   | 4-8  |
| Figure 4.11 - Aik Instruction Block .....   | 4-9  |
| Figure 4.12 - AOLT Instruction Block .....  | 4-10 |



# 1.0 INTRODUCTION

The products described in this instruction manual are manufactured by Reliance Electric Industrial Company.

The 2-In/2-Out 0-10 Volt Analog Rail module allows you to connect two input and two output 0-10V analog signals to AutoMate®, AutoMax®, and DCS 5000 systems. Typically, the Analog Rail module is used with potentiometers, valve actuators, pressure or flow transducers, and meters in both drive control systems and process control systems.

The Analog Rail module is hardware-configurable by means of a faceplate switch to emulate one of two types of devices, AutoMate Rails or AutoMate Local Heads. In some hardware configurations, the type of interface device available for the Analog Rail module will determine the mode of operation that can be selected (see figure 1.1).

The Analog Rail module operates in Local Head mode when it is connected directly to one of the processor's four I/O ports in AutoMate systems, to an AutoMate Local I/O Processor, or to one of the four I/O ports of the DCS 5000/AutoMax Remote I/O Head in DCS 5000/AutoMax systems. The Analog Rail data will take up four registers in the host when operating in Local Head mode.

The module operates in Rail mode when it is connected to one I/O port of a Local I/O Head, which in turn is connected to one I/O port of an AutoMate processor. The Analog Rail module will occupy one register of the host in Rail mode. The Rail mode is used to expand the I/O address space available through the front I/O port of the processor by multiplexing each group of four analog points through one register. Note that the Analog Rail module cannot be used with the Local I/O Head in DCS 5000/AutoMax systems.

The Analog Rail module operates in Rail mode when it is connected to one I/O port of the Power Module Interface (PMI) Processor (B/M 6000C), which is in turn connected to a Universal Drive Controller (UDC) module (M/N 57552) which resides in an AutoMax rack.

The remainder of this manual describes the functions and specifications of the module. It also includes a detailed overview of installation and troubleshooting procedures, as well as examples of configuration and programming.

## 1.1 Additional Information

You must become familiar with the instruction manuals which describe your system configuration. This may include, but is not limited to, the following:

- J-3031 AutoMate 30 PROCESSOR HARDWARE INSTRUCTION MANUAL
- J-3033 AutoMate LOCAL I/O PROCESSOR INSTRUCTION MANUAL
- J-3037 AutoMate REMOTE I/O HEAD INSTRUCTION MANUAL
- J-3063 AutoMate PROGRAMMING EXECUTIVE INSTRUCTION MANUAL

- J-3120 AutoMate 20 USER'S MANUAL
- J-3141 AutoMate 40 CONTROL PROCESSOR INSTRUCTION MANUAL
- J-3150 AutoMate 30/40 SOFTWARE REFERENCE MANUAL
- J-3648 DCS 3000 AutoMax CONFIGURATION TASK INSTRUCTION MANUAL
- J-3650 AutoMax PROGRAMMING EXECUTIVE INSTRUCTION MANUAL
- J-3660 DCS 3000 ENHANCED BASIC LANGUAGE INSTRUCTION MANUAL
- J-3670 AutoMax ENHANCED BASIC LANGUAGE INSTRUCTION MANUAL
- J-3680 DCS 3000 CONTROL BLOCK LANGUAGE INSTRUCTION MANUAL
- J-3676 AutoMax CONTROL BLOCK LANGUAGE INSTRUCTION MANUAL
- J-3682 DCS 5000 CONTROL BLOCK LANGUAGE INSTRUCTION MANUAL
- J-3677 AutoMax LADDER LOGIC LANGUAGE INSTRUCTION MANUAL
- J-3671 AutoMate LOCAL I/O HEAD INSTRUCTION MANUAL
- J-3750 PeSource AutoMax PROGRAMMING EXECUTIVE INSTRUCTION MANUAL VERSION 3.0
- J2-3015 AutoMax PROGRAMMING EXECUTIVE VERSION 3.0
- S-3006 D-C DRIVE CONFIGURATION AND PROGRAMMING INSTRUCTION MANUAL
- S-3008 POWER MODULE INTERFACE BACK INSTRUCTION MANUAL
- Your personal computer and DOS operating system manual(s).
- IEEE 519 GUIDE FOR THE INSTALLATION OF ELECTRICAL EQUIPMENT TO MINIMIZE ELECTRICAL NOISE INPUTS TO CONTROLLERS

## 1.2 Related Hardware and Software

The 2-In/2-Out 0-10V Analog Rail module, M/N 610000, contains the following:

- 1 One 2-In/2-Out 0-10V Analog Rail module
- 2 One I/O Rail card: M/N 46105
- 3 Two plug connectors: 12-point connector part no. 41943/-2H  
4-point connector part no. 41943/-1H
- 4 One .25A fuse (installed in the module): part no. 64676-23J
- 5 One .75A fuse (required for operation on 24 VDC):  
part no. 64676-23Q
- 6 Two cable retainer clips



The Analog Rail module can be configured with the hardware (purchased separately) listed in Figure 1-1.

| Host  | Model  | Operating Mode       |
|---|--|----------------------|
| DCS 3000/AutoMax Remote I/O Head  | M/N 5/C330                                       | Local Head           |
| AutoMate 20, 30E  | M/N 45C20, 45C21, 45C220, 45C221, 45C224, 45C225 | Local Head or Rail * |
| AutoMate 30, 30E  | M/N 45C30*, 45C30b, 45C307                       | Local Head or Rail * |
| AutoMate 40, 40E  | M/N 45C410, 45C411                               | Local Head or Rail * |
| AutoMate Local I/O Processor  | M/N 45U2008 (and later versions)                 | Local Head           |
| AutoMate Remote I/O Head  | M/N 45C37, 45C38                                 | Local Head           |
| Power Module Interface Processor  | R/M 60000  | Rail                 |
| * Direct connection to the Processors (Local Head mode) or connection through an AutoMate Local I/O Head, M/N 45C22, 61C22, 61C22A, or 61C23 (Rail mode). Note that it is also permissible to configure the Analog Rail module for Rail mode even if it is connected directly to an AutoMate 20, 30, or 40 Processor. |  |                      |

Figure 1-1 - Analog Rail Module Hardware Configuration



## 2.0 MECHANICAL/ELECTRICAL DESCRIPTION

The following sections describe the mechanical and electrical characteristics of the Analog Rail module.

### 2.1 Mechanical Description

The Analog Rail module is a self-contained electronic module containing two input channels multiplexed to an analog-to-digital converter and a dual digital-to-analog converter for two output channels. The module is housed in a protective metal enclosure designed for panel mounting. See figure 2.1.

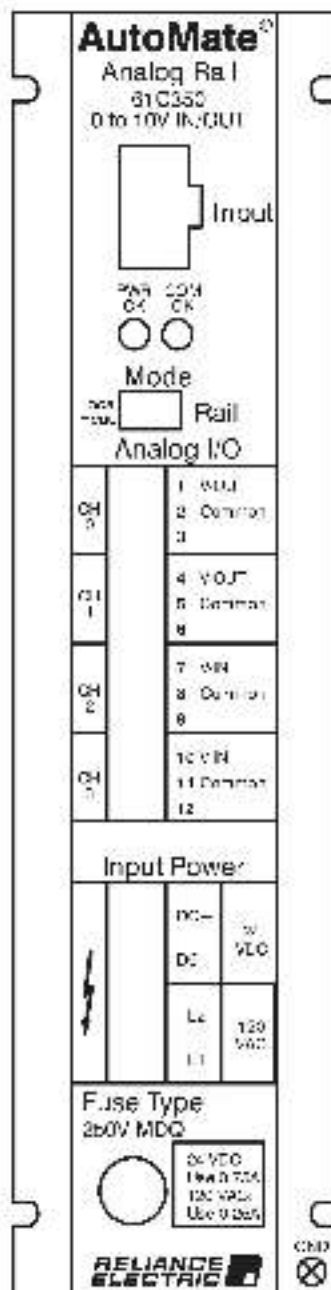


Figure 2.1 - Analog Rail Module Facplate

The faceplate of the module contains three electrical connectors labeled "Input," "Analog I/O," and "Input Power" (reading top to bottom). The top connector is used for connection to the I/O port. A cable (M/M 4505) is provided for this purpose. The second connector, labeled "Analog I/O," is a numbered, 12 point removable plug connector with screw-type terminal points. Three successive terminal points are reserved for each channel's connection to external hardware. The top 6 points are reserved for the two output channels (channel 0 and channel 1) and the bottom 6 are reserved for the two input channels (channel 2 and channel 3). The "Analog I/O" terminals are designed for 14-22 AWG wire.

The third connector on the faceplate, also a removable plug connector with screw-type terminal points, is used for input power. The terminal points are labeled. The top two points are used if the power source is 24 VDC. The bottom two points are used if the power source is 120 VAC. The "Input Power" terminals are designed to use 14 AWG wire. A terminal stud for connecting a grounding conductor is provided on the bottom of the right-hand mounting flange.

The module faceplate also contains two LEDs, a mode switch, and a fuse holder and fuse. The LED labeled "PWR OK" indicates that the I/O port, the external power source, and the internally-generated voltages necessary for operation of the module are present. The "COMM OK" LED indicates whether all four channels are successfully communicating with the host.

The switch, labeled "Mode" is used to select between "Local Host" and "Rail" mode. Note that the position of the switch is read only once at the time power is turned on to the Reliance device that is connected to the Analog Rail module. The mode will remain fixed as long as this device is powered up.

As shipped from the factory, the fuse holder on the bottom of the faceplate contains a .25A fuse for 120 VAC input power. If input power will be 24 VDC, you need to replace the fuse with the .75A fuse included along with the Analog Rail module.

## 2.2 Electrical Description

The Analog Rail module contains two analog input channels that convert 0-10V analog input signals to proportional values between 0 and 4095, equal to 12 bits of digital data. Input signals are filtered through a second order low pass filter. The module also contains two output channels that can output 0-10V analog signals proportional to a value of 0 to 4095. Note that at a digital output = 4096, the output rolls over to zero again. Negative output values can not be accommodated.

The A/D and D/A conversions are triggered by the actual I/O update sequences. The conversion rate is therefore dependent upon the scan time of the application task. See figure 2.2 for a typical output circuit. See figure 2.3 for a typical input circuit.

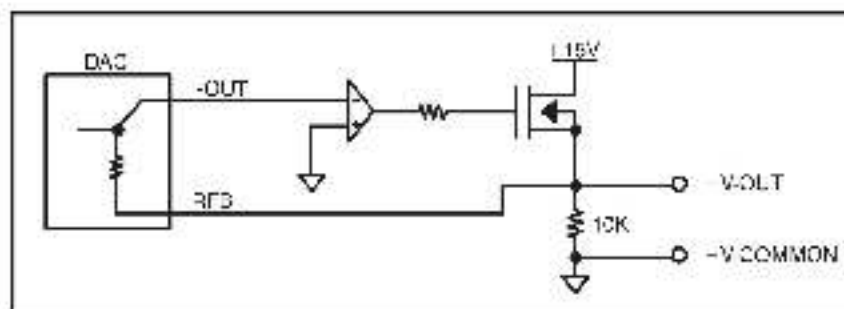


Figure 2.2 - Typical Output Circuit

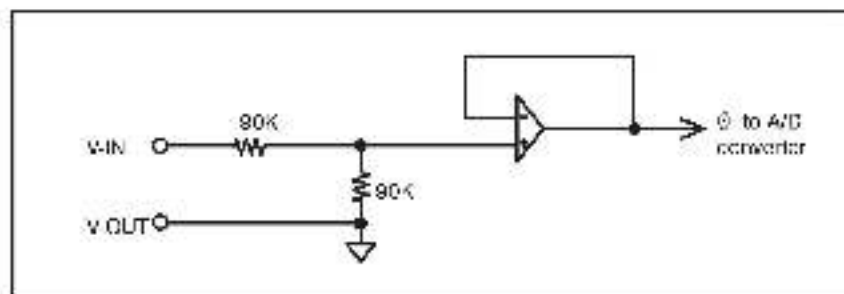


Figure 2.3 - Typical Input Circuit

The Analog Rail module is factory calibrated and requires no offset/gain adjustment. All four analog I/O channels are referenced to the same common. This common is isolated from both the external power supply and the I/O port connection.

The module incorporates extensive diagnostics. In Host mode, check bits are monitored for accuracy on every transfer of data between the host and the module. In Local Head mode, parity bits are monitored for accuracy on every transfer of data. A Rail fault LED on the processor, Remote Head, or Local Head will be illuminated if the check bits or parity bits are wrong and all transmission will stop after  $n$  retries, where  $n$  is a value determined by the host's software (average  $n = 4$  for AutoMax; AutoMate  $n = 2$ ).

In the event of a rail fault, all outputs will be set to 0. The "COM OK" LED on the module will go off. If any power required by the module, i.e., the +5 Volts from the I/O port required for communication, the external power supply, or the power required by the Analog I/O section, is not within specified limits, all outputs will be set to 0 and the "PWR OK" LED will go on.

## 3.0 INSTALLATION

This section describes how to install and replace the Analog Rail module. Note that analog signals are sensitive to variations in temperature. The Analog Rail module is designed to perform optimally at room temperature, approximately 20°C. In all cases, the ambient temperature of the installation must be maintained in the range specified in Appendix A to ensure the highest possible accuracy.

### **DANGER**

**THE USER IS RESPONSIBLE FOR CONFORMING WITH THE NATIONAL ELECTRICAL CODE AND ALL OTHER APPLICABLE LOCAL CODES. WIRING PRACTICES, GROUNDING, DISCONNECTS, AND OVER-CURRENT PROTECTION ARE OF PARTICULAR IMPORTANCE. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.**

### **DANGER**

**DO NOT TOUCH THE CONNECTORS ON THE FACEPLATE IF THERE IS POWER ON THE WIRES ATTACHED TO THE PLUG CONNECTOR SCREW TERMINALS. ALWAYS TURN OFF POWER BEFORE HANDLING A CONNECTOR THAT IS WIRED. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.**

### **WARNING**

**UNEXPECTED OUTPUT CHANGES MAY RESULT IF AN ANALOG RAIL IS PLUGGED INTO A LOCAL I/O HEAD THAT IS COMMUNICATING WITH A PROCESSOR. ANY HARDWARE CONFIGURATION CHANGES MUST BE MADE ONLY WITH THE LOCAL I/O INTERFACE CABLE (M/N 45C8) DISCONNECTED. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY.**

### **CAUTION**

**THE ANALOG RAIL MODULE IS DESIGNED TO BE POWERED BY EITHER 24 VDC OR 120 VAC. CONNECT THE PROPER POWER SOURCE TO THE MODULE. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN DAMAGE TO OR DESTRUCTION OF THE EQUIPMENT.**

## 3.1 Wiring

To reduce the possibility of electrical noise interfering with the proper operation of the control system, exercise care when installing the wiring between the module and the external hardware.

Use shielded twisted pair for all wiring between the Analog Rail module and the external hardware. Rocon T-8761 or an equivalent cable type is recommended. Cable lengths should be limited to 50 feet maximum. For detailed recommendations, refer to IHH-318.

## 3.2 Initial Installation

Use the following procedure to install the Anslor Rail module.

- Step 1. Using the mounting dimensions shown in figure 3.1, prepare the necessary mounting provisions on the panel. The module is designed to be mounted vertically using four #10 or M6 bolts or studs. Multiple modules should be mounted side by side. The flange width of two modules side by side is sufficient to dissipate the heat produced by the modules. The modules can also be mounted one above the other, but since this hardware configuration does not allow the most efficient heat dissipation, the minimum clearance between the module chassis is 5". See figure 3.1.

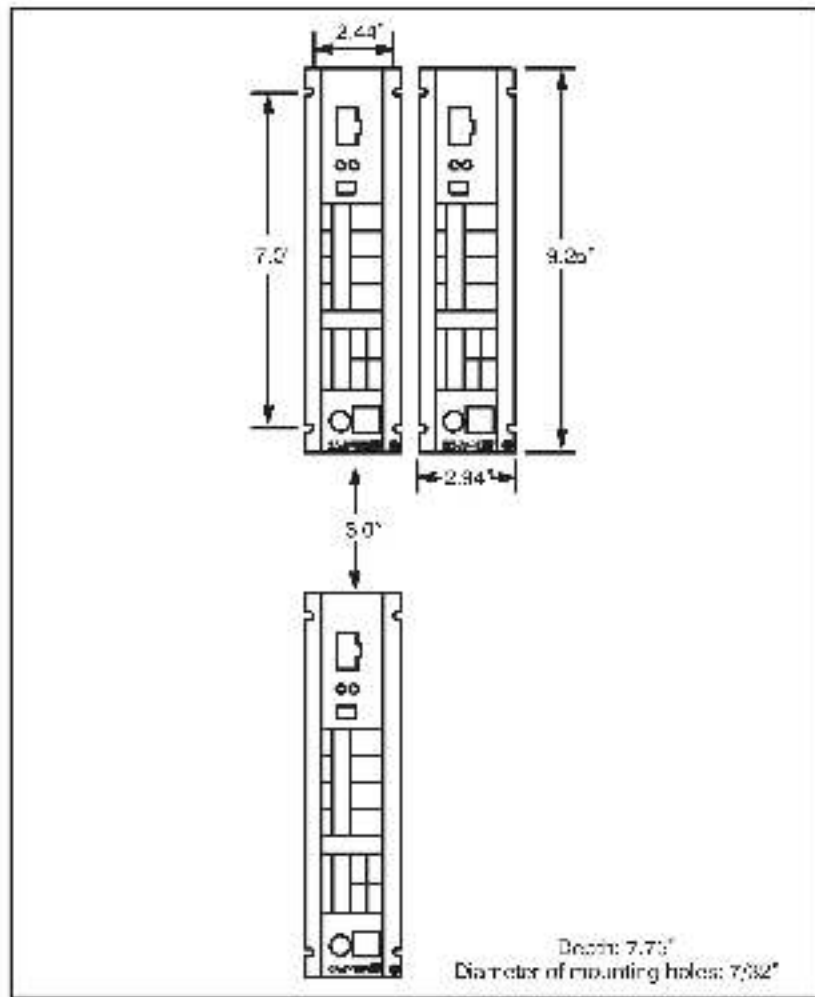


Figure 3.1 - Mounting Dimensions



- Step 2 If the power supply you are using is 24 VDC, replace the factory-installed .25A fuse with the .75A fuse that came in the shipping box with the module. Use a screwdriver to release the fuse holder located on the Analog Rail module faceplate. Pull the fuse holder out of the module. Take the .25A fuse out of the fuse holder and replace it with the .75A fuse. Re-insert the fuse holder into the module. Turn the screwdriver clockwise while pressing down on the fuse holder. The fuse holder must be flush against the faceplate.
- Step 3 Mount the Analog Rail on the panel and attach it securely with #10 (M6) studs or bolts.
- Step 4 Make certain that no voltage is present on the wires that will be used to provide 120 VAC or 24 VDC power to the Analog Rail module. Use either a 120 VAC or 24 VDC power supply, but not both.
- Step 5 Using 14 AWG wire, connect input power to the screw terminals on the "Input Power" plug connector on the faceplate as shown below. Strip off approximately 5/16" of insulation from the wires.

#### 24 VDC Power

| Signal   | Terminal Label | Terminal Number |
|----------|----------------|-----------------|
| 24 VDC – | DC –           | 1               |
| 24 VDC + | DC +           | 2               |

#### 120 VAC Power

| Signal              | Terminal Label | Terminal Number |
|---------------------|----------------|-----------------|
| 120 VAC – (neutral) | L2/N           | 3               |
| 120 VAC + (hot)     | L1             | 1               |

- Step 6 Use the stud marked "GND" (ground) on the bottom right flange of the module to connect a ground wire.

#### DANGER

THE USER IS RESPONSIBLE FOR CONFORMING WITH THE NATIONAL ELECTRICAL CODE AND ALL OTHER APPLICABLE LOCAL CODES. WIRING PRACTICES, GROUNDING, DISCONNECTS, AND OVER-CURRENT PROTECTION ARE OF PARTICULAR IMPORTANCE. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.

- Step 7 Turn off all power to any external hardware that will provide input signals to the module or be powered by the module.
- Step 8 Attach a retainer clip to the connector at each end of the I/O Rail cable (M/N 1505). Note that faceplate connectors have slots that correspond to the part of the retainer clip that protrudes away from the cable connector. The retainer clip is used to assure a tight connection between the cable and faceplate connectors.
- Step 9 Using 14-22 AWG wire, connect external hardware to the "Analog I/O" plug connector on the faceplate as shown below. Strip off approximately 5/16" insulation from the wires.

| Channel | Terminal Number | Terminal Label | Signal                   |
|---------|-----------------|----------------|--------------------------|
| 0       | 1               | V-OUT          | 0-10V+ output            |
|         | 2               | Common         | common                   |
|         | 3               | (no label)     | (shield; no connection)* |
| 1       | 4               | V-OUT          | 0-10V+ output            |
|         | 5               | Common         | common                   |
|         | 6               | (no label)     | (shield; no connection)* |
| 2       | 7               | V-IN           | 0-10V+ input             |
|         | 8               | Common         | common                   |
|         | 9               | (no label)     | (shield; no connection)* |
| 3       | 10              | V-IN           | 0-10V+ input             |
|         | 11              | Common         | common                   |
|         | 12              | (no label)     | (shield; no connection)* |

\*This pin makes no electrical connection to the Analog Rail printed circuit board.

- Step 10. For the two output channels, connect a shield wire from the external hardware to the third terminal (terminals 3 and 6, respectively). Insert a jumper between terminals 2 and 5, and between 4 and 8. The shield wire at the external hardware end of the cable should be cut short and taped back to prevent any electrical contact. See figure 3.2.
- Step 11. For the two input channels, connect a shield wire from the external hardware to the third terminal (terminals 9 and 12, respectively). The shield wire at the external hardware end of the cable should be connected to the source reference point. See figure 3.2.

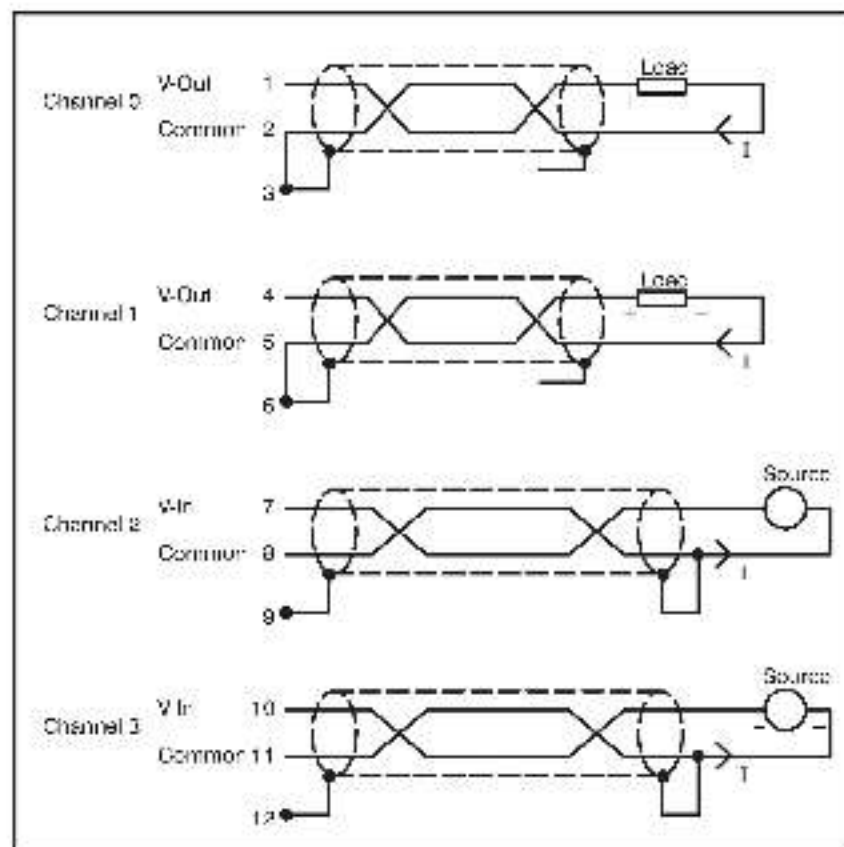


Figure 3.2- Typical Recommended Input and Output Shielding Methods

- Step 12. Turn off power to the Reliance device that will be connected to the Analog Rail module.
- Step 13. Set the "Mode" switch on the faceplate of the module to the closed position.
- Step 14. Connect the I/O Rail cable between the Analog Rail connection labeled "Input" and an I/O port on the Reliance device that will communicate with the module. Turn on power to the Reliance device that will communicate with the module. Recall that the Mode switch is read each time the Reliance device connected to the Analog Rail module is powered up.
- Step 15. The Analog Rail installation is now ready for testing. Inspect all work to assure that the installation has been performed properly.
- Step 16. Turn on power to the "Input Power" wiring. Turn on power to the external hardware.
- Step 17. Verify that the hardware has been installed correctly. Before testing, insure that the external hardware will not respond to output signals from the Analog Rail module.

#### WARNING

BE CAREFUL WHEN WRITING TO THE OUTPUTS TO INSURE THAT NO UNEXPECTED MACHINE MOTION WILL RESULT. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY OR DAMAGE TO EQUIPMENT.

For AutoMate systems, you must configure the AutoMate processor using the AutoMate Programming Executive (APE) before testing. See section 4.0 for more information. After configuring the module, use the AFX Point Monitor function to test the module. You can test the Analog Rail module's output channels by writing a value between 0 and 4095 to those channels and, with a voltmeter, verifying that the output on the terminal points (0 to 10V) is proportional. To test input channels, verify that the input signal in the channel (0 to 10V) is proportional to a voltmeter reading at the terminal points.

For DCS 6000, AutoMax, or Distributed Power D-C Drive systems, use the DCS 6000 or AutoMax Programming Executive software I/O Monitor function, respectively. Test output channels by writing a value between 0 and 4095 to those channels and using a voltmeter to verify that the signal on the terminal points (0 to 10V) is proportional. To test input channels, verify that the input signal in the channel (0 to 10V) is proportional to a voltmeter reading at the terminal points.

### 3.3 Module Replacement

Use the following procedure to replace the module.

- Step 1. Stop any application programs that are running.
- Step 2. Turn off power to the external hardware connected to the input and output channels on the backplate of the module.
- Step 3. Turn off power to the Analog Rail module (120 VAC or 24 VDC).
- Step 4. Turn off power to the Reliance device connected to the Analog Rail module.
- Step 5. Disconnect the I/O Rail cable from the Analog Rail module.
- Step 6. Without disconnecting the wiring, remove the 12-point terminal from the backplate and set aside.
- Step 7. Without disconnecting the wiring, remove the 4-point terminal from the backplate and set aside. Disconnect the ground wire from the bottom right-hand langle.
- Step 8. Loosen the screws that hold the Analog Rail module to the back and remove the module.
- Step 9. If the power supply you are using is 24 VDC, you need to replace the factory-installed .25A fuse in the new module with the .75A fuse that came in the shipping box with the module. Use a screwdriver to release the fuse holder located on the Analog Rail module backplate. Pull the fuse holder out of the module.

Take the 25A fuse out of the fuse holder and replace it with the .75A fuse. Re-insert the fuse holder into the module. Turn the screwdriver clockwise while pressing down on the fuse holder at the same time. The fuse holder must be flush against the faceplate.

- Step 10. Remove the two plug connectors from the faceplate of the new module by pulling them firmly away from the faceplate.
- Step 11. Place the new module over the pattern drilled and attach it securely to the wall with #10 or M5 studs or bolts.
- Step 12. Attach the original 2-point and 4-point connectors with wiring to the faceplate of the module. Use the stud marked "GND" (ground) on the bottom right flange of the module to connect a ground wire.
- Step 13. Set the "Mode" switch on the faceplate of the module to the desired position.
- Step 14. Connect the I/O Rail cable between the Analog Rail connection labeled "Input" and any rail connector on the Reliance device that will communicate with the module. Turn on power to the Reliance device that will communicate with the module. Recall that the Mode switch is read each time the Reliance device connected to the Analog Rail module is powered up. If applicable, reconnect the cable between the Load (Q) Head, or the DCS (DCD)/AutoMax Remote (Q) Head, and the host.
- Step 15. Turn on power to the Analog Rail module "Input Power" connections.
- Step 16. Turn on power to the external hardware connected to the Analog Rail module.
- Step 17. Verify that the hardware has been installed correctly. Before testing, insure that the external hardware cannot respond to output signals from the Analog Rail module.

#### **WARNING**

**BE CAREFUL WHEN WRITING TO THE OUTPUTS TO INSURE THAT NO UNEXPECTED MACHINE MOTION WILL RESULT. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY OR DAMAGE TO EQUIPMENT.**

For AutoMate systems, use the APX Point Monitor function to test the module. You can test the Analog Rail module output channels by writing a value between 0 and 4095 to those channels and, with a voltmeter, verifying that the output on the terminal points (0 to 10V) is proportional. To test input channels, verify that the input signal in the channel (0 to 10V) is proportional to a voltmeter reading at the terminal points.

For DCS 6000, AutoMax, or Distributed Power D-C Drive systems, use the DCS 6000 or AutoMax Programming Executive software I/O Monitor function, respectively. Test output channels by writing a value between 0 and 4095 to those channels and using a voltmeter to verify that the signal on the terminal points (0 to 10V) is proportional. To test input channels, verify that the input signal on the channel (0 to 1 CV) is proportional to a voltmeter reading at the terminal points.

## 4.0 PROGRAMMING

This section describes how the data is organized in the module and provides examples of how the module is accessed by application programs.

When creating application programs, the programmer should estimate the magnitude of input signals and output data because both must be in the specified range of the Analog Rail module (0-10V). Input signals greater than 10V will be clamped at 4095. Input signals greater than approximately 11.3V will also cause the over range bit (12 decimal; 14 octal) to be set to 1. Signals less than 0V are clamped at zero (0). Signals less than approximately -1V will also cause the under range bit (13 decimal; 15 octal) to be set to 1. See Figure 4.1.

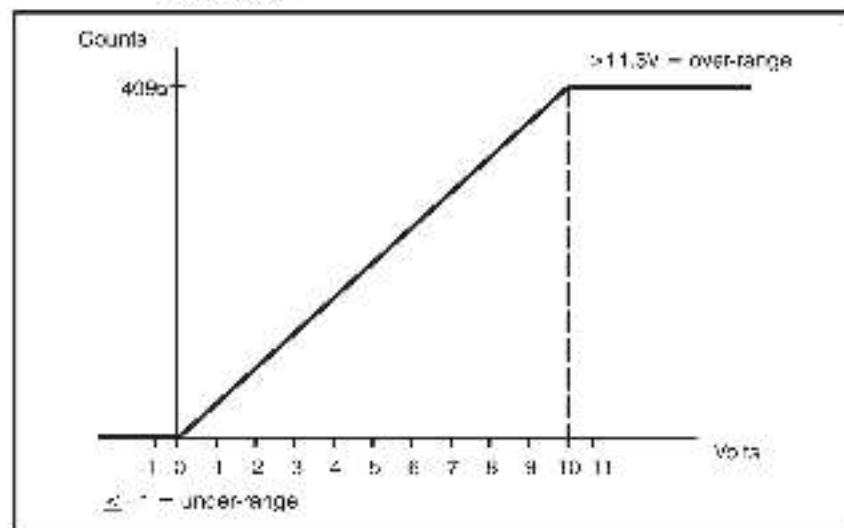


Figure 4.1 Input Signal Conversion

Recall that at a digital output = 4095, the output rolls over to zero again. The programmer must include limits in the application software to ensure that the data sent to output channels is always in the specified range (allowable range = 0 to 4095).

### 4.1 Analog Rail Module In AutoMate Systems

This section describes how the Analog Rail is used with AutoMate systems. Local Host mode allows all four channels on the module to be updated at the end of the scan (normal I/O update rate in this configuration), or during the scan using AIN and AOUT blocks (see section 4.1.4). Rail mode allows only one channel to be updated at the end of the scan (normal I/O update rate in this configuration), or all four channels to be updated during the scan if AIN and AOUT blocks are used.

#### 4.1.1 Configuring the AutoMate Processor for Use with the Analog Rail Module

Configuration is the process of describing in software how the hardware and software in the system are related. The Analog Rail module is configured using the AutoMate Programming Executive (APE) software, M/N 45C130 or 45C131. Select CONFIGURE SYSTEM from the main menu to create the configuration.

Note that the Analog Rail module can also be configured using the AutoMate Programming System (APS) software, M/N 45C134, 45C141, 45C142, or 45C143. Refer to instruction manual 02-3041 for additional information.

The Analog Rail module is configured depending upon the mode in which it is being used. See figures 4.2, 4.3, 4.4, 4.5, and 4.6 for how to configure the Analog Rail for use with AutoMate processors. The sample configurations are shown as they appear on the APE screen. Unless otherwise noted, all references to the AutoMate 20, 30, and 40 will also apply to the 20E, 30E and the 40E, respectively.

##### Analog Rail Module w/ AutoMate 20 (Local Head Mode or Rail Mode)

AutoMate 20 registers reserved for port configuration:

|      |                       |
|------|-----------------------|
| 2734 | Port 0 of AutoMate 20 |
| 2735 | Port 1 of AutoMate 20 |
| 2736 | Port 2 of AutoMate 20 |
| 2737 | Port 3 of AutoMate 20 |

##### Local Head Mode

Enter the value 51XX for the register representing the port to which the Analog Rail module is connected, where XX is a value from 00-14\*. The XX value represents the first register in a set of four contiguous registers that will be used to store data for the port.

##### Rail Mode

Enter the value 16XX for the register representing the port to which the Analog Rail module is connected, where XX is a value from 00-17\*. The XX value represents the register that will be used to multiplex data through the (A) port.

\*Values are in octal notation

Figure 4.2 - Configuration for Analog Rail Module with AutoMate 20



Analog Rail Module Connected Directly to AutoMate 30 or 40  
(Local Head Mode or Rail Mode)

The following sample configuration shows two Analog Rail modules connected directly to an AutoMate 30 or 40 Processor in Local Head mode.

| AS | DRCP | TYPE | FEED | CARD | CH1 | FEEDSTEP | CH1 | FEEDSTEP | CH2 | FEEDSTEP | CH3 | FEEDSTEP |
|----|------|------|------|------|-----|----------|-----|----------|-----|----------|-----|----------|
| 1  |      |      |      | ARM  | RD  | 0.1      | 1H1 | 0.2      | NU  |          | NU  |          |

The following sample configuration shows two Analog Rail modules connected directly to an AutoMate 30 or 40 Processor in Rail Mode :

| ASLT | DRCP | TYPE | FEED | CARD | CH1  | FEEDSTEP | CH1 | FEEDSTEP | CH2 | FEEDSTEP | CH3 | FEEDSTEP |
|------|------|------|------|------|------|----------|-----|----------|-----|----------|-----|----------|
| 1    |      |      |      | ARM  | RAIL | 0.1      | FA1 | 1        | NU  |          | NU  |          |

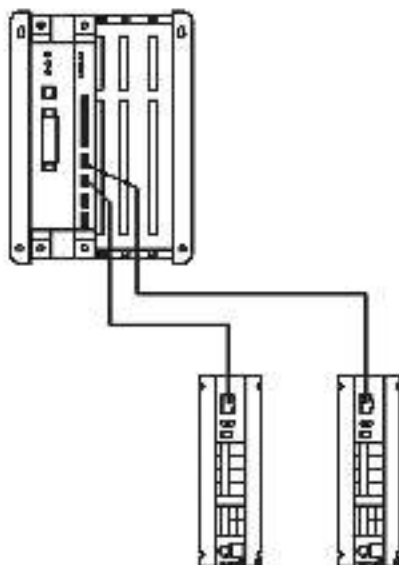


Figure 4.3- Sample Configurations for Analog Rail Module  
Connected Directly to AutoMate 30 or 40

Analog Rail Module Connected to AutoMate 30 or 40 Through a Local I/O Head  
(Rail Mode Only)

The following sample configuration shows two Analog Rs485 modules connected to an AutoMate 30 or 40 through a Local I/O Head:

|      |      |      |      |      |      |      |      |      |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |        |
|------|------|------|------|------|------|------|------|------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|--------|
| MS 1 | MS 2 | MS 3 | MS 4 | MS 5 | MS 6 | MS 7 | MS 8 | MS 9 | MS 10 | MS 11 | MS 12 | MS 13 | MS 14 | MS 15 | MS 16 | MS 17 | MS 18 | MS 19 | MS 20 | MS 21 | MS 22 | MS 23 | MS 24 | MS 25 | MS 26 | MS 27 | MS 28 | MS 29 | MS 30 | MS 31 | MS 32 | MS 33 | MS 34 | MS 35 | MS 36 | MS 37 | MS 38 | MS 39 | MS 40 | MS 41 | MS 42 | MS 43 | MS 44 | MS 45 | MS 46 | MS 47 | MS 48 | MS 49 | MS 50 | MS 51 | MS 52 | MS 53 | MS 54 | MS 55 | MS 56 | MS 57 | MS 58 | MS 59 | MS 60 | MS 61 | MS 62 | MS 63 | MS 64 | MS 65 | MS 66 | MS 67 | MS 68 | MS 69 | MS 70 | MS 71 | MS 72 | MS 73 | MS 74 | MS 75 | MS 76 | MS 77 | MS 78 | MS 79 | MS 80 | MS 81 | MS 82 | MS 83 | MS 84 | MS 85 | MS 86 | MS 87 | MS 88 | MS 89 | MS 90 | MS 91 | MS 92 | MS 93 | MS 94 | MS 95 | MS 96 | MS 97 | MS 98 | MS 99 | MS 100 |
| 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10    | 11    | 12    | 13    | 14    | 15    | 16    | 17    | 18    | 19    | 20    | 21    | 22    | 23    | 24    | 25    | 26    | 27    | 28    | 29    | 30    | 31    | 32    | 33    | 34    | 35    | 36    | 37    | 38    | 39    | 40    | 41    | 42    | 43    | 44    | 45    | 46    | 47    | 48    | 49    | 50    | 51    | 52    | 53    | 54    | 55    | 56    | 57    | 58    | 59    | 60    | 61    | 62    | 63    | 64    | 65    | 66    | 67    | 68    | 69    | 70    | 71    | 72    | 73    | 74    | 75    | 76    | 77    | 78    | 79    | 80    | 81    | 82    | 83    | 84    | 85    | 86    | 87    | 88    | 89    | 90    | 91    | 92    | 93    | 94    | 95    | 96    | 97    | 98    | 99    | 100    |

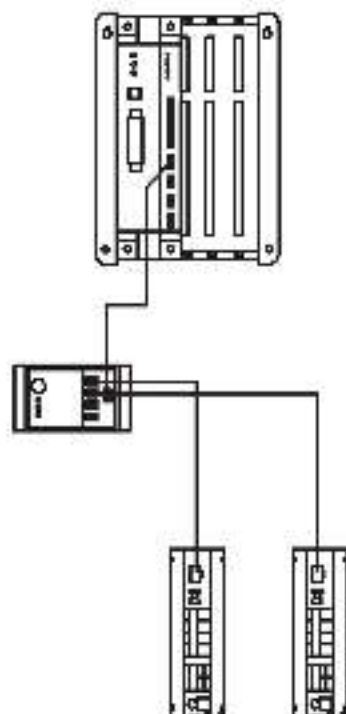


Figure 4.4 Sample Configuration for Analog Rail Module Connected to AutoMate 3D or 40 through Local I/O Hard

The following example configuration shows three Analog Rail modules connected to a Local I/O Processor in a remote rack.

[illegible]

|  |
|--|
|  |
|--|

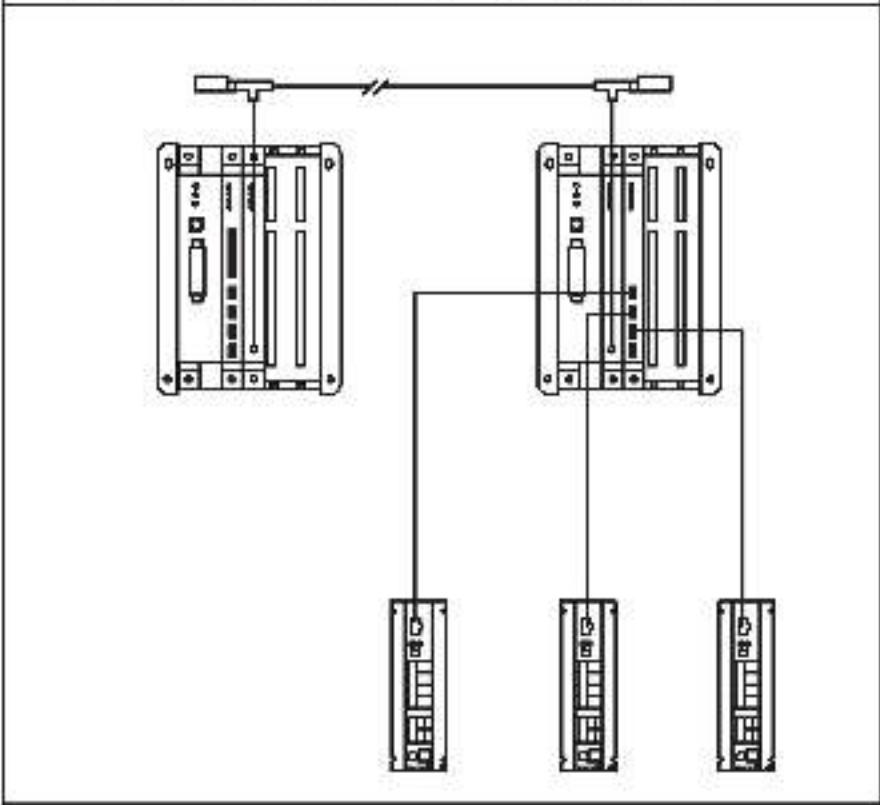


Figure 4-9 Sample Configuration for Analog Rail Module with AutoMerge Local I/O Processor

The following sample configuration shows one Analog Rail module connected to an AutoMate Remote I/O Head:

|    |      |                    |      |      |        |        |       |       |        |        |        |    |
|----|------|--------------------|------|------|--------|--------|-------|-------|--------|--------|--------|----|
| NH | D-DM | V <sup>a</sup> 100 | 1000 | 796  | 14 158 | 14 011 | 4 634 | 4 408 | 14 034 | 14 003 | 14 150 | 15 |
| 2  | C    | 10-10              | (14) | (14) | 263    | 241    |       | 511   |        |        | 511    |    |

© 2012 Blackwell Publishing Ltd *Journal of Internal Medicine* 272: 257–265

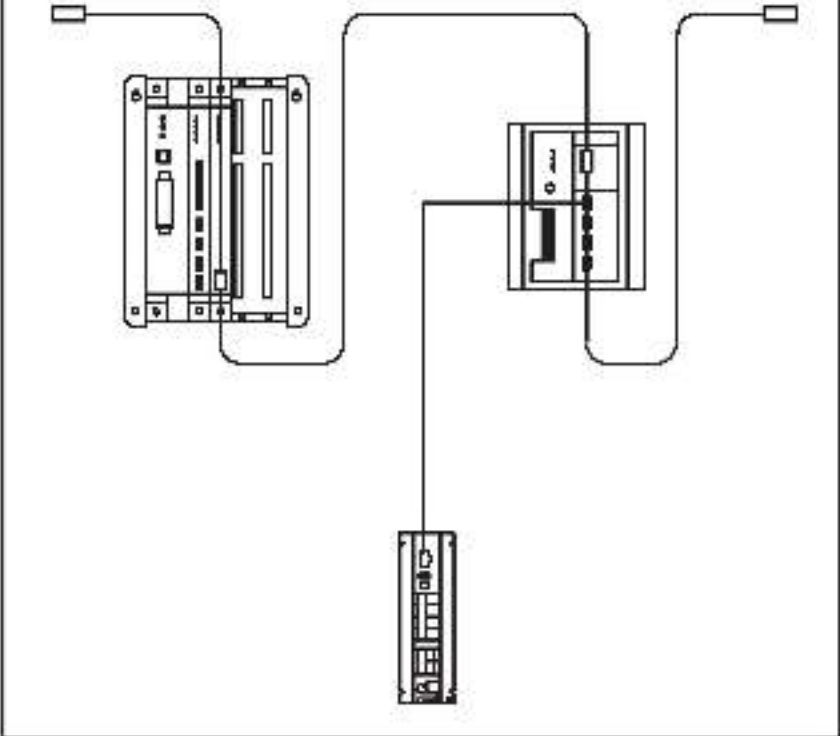


Figure 4.6- Sample Configuration for Analog Rail Module with AutoMate Remote I/O Head

#### 4.1.2 AutoMate Programming in Rail Mode

In **Fast mode**, the **Analog Fast** module is mapped in one I/O register of the processor. Data from one of the four channels will occupy the register as a function of the channel select bits. The active channel is updated at the end of each scan. For input channels, the two channel select bits in the register must be set to the appropriate input channel number. After the I/O update, the register contains the data in the format shown in figure 4.7. For output channels, the data in the register must be in the format shown in figure 4.8 prior to the I/O update.

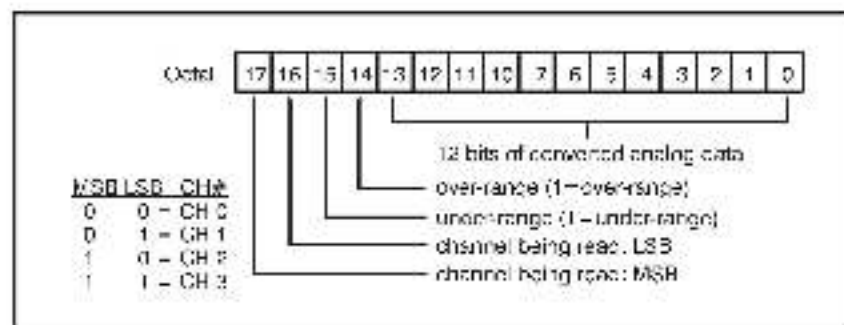


Figure 4-7 - Rail Mode Register Image for Input Channels

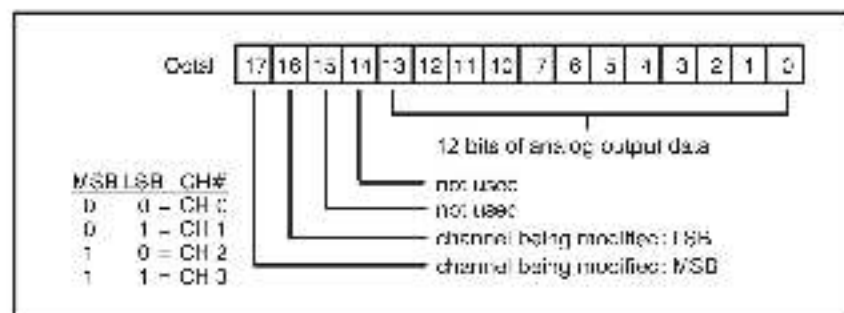


Figure 4-8 - Rail Mode Register Image for Output Channels

The Analog Rail module data may also be accessed in the middle of the scan (as opposed to the end of the scan, which is the normal mode of operation for digital rail I/O) using the appropriate number of Analog In (AIN) and Analog Out (AOUT) blocks. The AIN block will check whether the over-range or under-range bits have been set by the module and the error coil will be energized, if applicable. The AOUT block will set the channel select bits appropriately. See section 4.1.4 for more information about the AIN and AOUT blocks.

Note that the AIN and AOUT blocks are supported by the AutoMate 20E M/N 45C224 and 45C225, but not the AutoMate 20 (M/N 45C20, 45C21, 45C22), 45C221 by AFX Version 3.0.

For processors that do not support the AIN and AOUT blocks, you can use the MOVE block to move data in and out of the registers assigned and to determine the channel select bits. Over-range and under-range bits should be used as inputs to error coils. The NO update will occur automatically at the end of each scan. See Appendix C for a sample AutoMate program that reads from and writes to the Analog Rail module without using AIN and AOUT blocks.

### 4.1.3 AutoMate Programming In Local Head Mode

In Local Head mode, the module is imaged in four I/O registers of the processor. Data from all four channels is always available and will be updated at the end of each scan. For input channels, it is not necessary to select the channel. After the I/O update, the register contains the data in the format shown in figure 4.9. For output channels, the data in the register must be in the format shown in figure 4.10 prior to the I/O update.

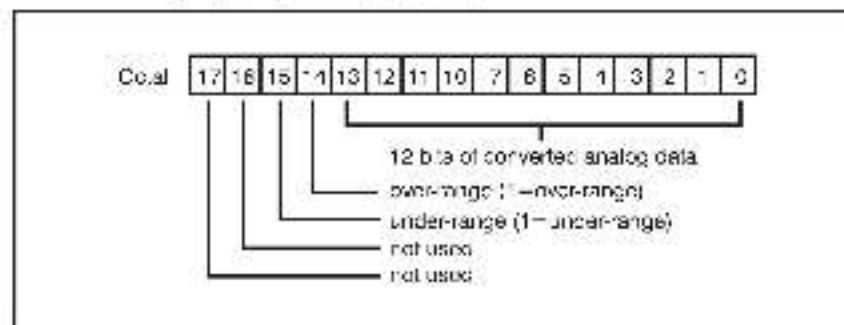


Figure 4.9 - Local Head Register Image for Input Channels

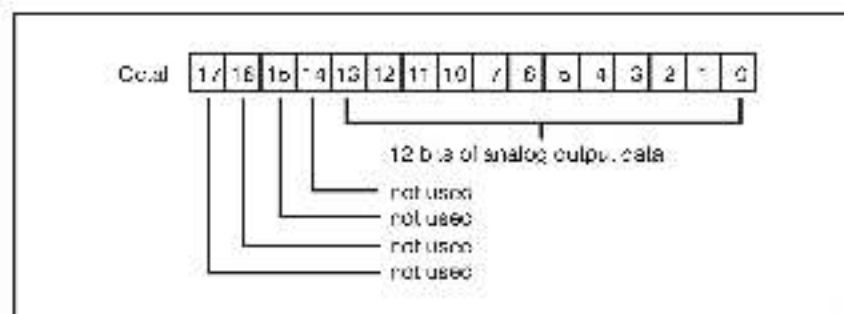


Figure 4.10 - Local Head Register Image for Output Channels

The Analog Rail module data may also be accessed in the middle of the scan (as opposed to the end of the scan) using the appropriate number of Analog In (AIN) and Analog Out (AOUT) blocks. The AIN block will set the over-range or under-range bits, if applicable. See section 4.1.4 for more information about the AIN and AOUT blocks.

Note that the AIN and AOUT blocks are supported by the AutoMate 20E (M/N 45C22\*) and 45C25, but not the AutoMate 20 (M/N 45C20, 45C21, 45C22\*, 45C221) by APX Version 3.0.

For processors that do not support the AIN and AOUT blocks, you can use the MOVH block to move data in and out of the registers assigned. Over-range and under-range bits should be used as inputs to emon coils. The I/O update will occur automatically at the end of each scan. See Appendix C for a sample AutoMate program that writes to and reads from the Analog Rail module without using AIN and AOUT blocks.

#### 4.1.4 Analog In (AIN) and Analog Out (AOUT) Instruction Blocks

The AIN and AOUT blocks are used, respectively, to read inputs from and write outputs to the Analog Rail module. AIN and AOUT Blocks are supported for the 20E processor. The AIN and AOUT blocks make it possible to update the channels on the Analog Rail module during the acsn instead of at the end of the acsn (the standard AutoMate I/O update). The blocks also make it possible to update all four channels during the acsn in Rail mode, a hardware configuration which would otherwise allow only one channel on the module to be updated. The format of the two blocks is shown in figures 4.11 and 4.12.

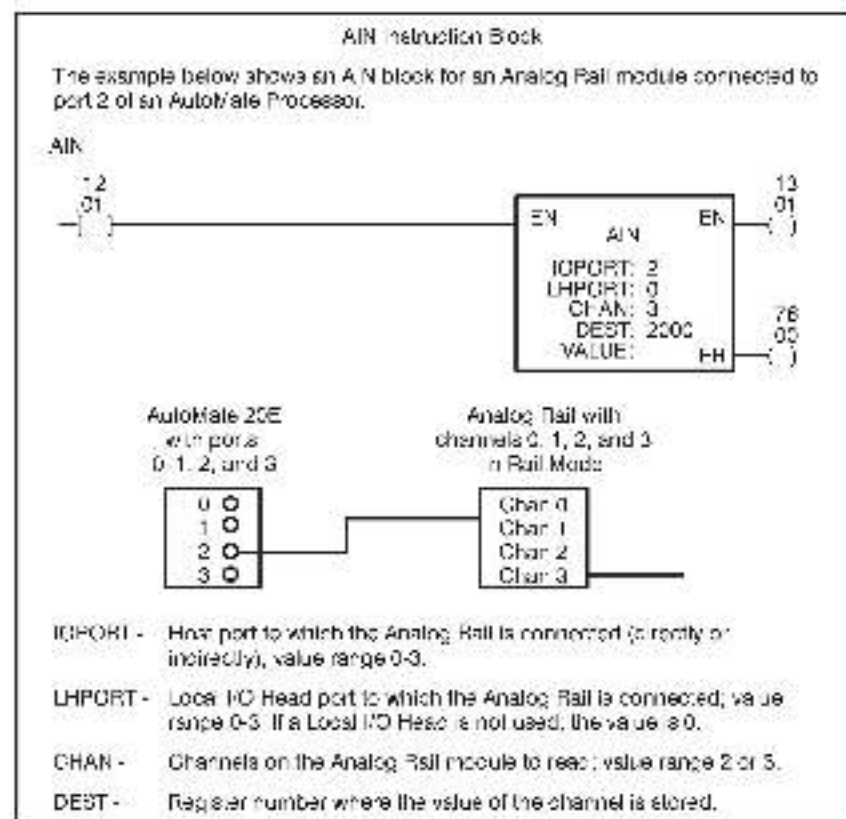


Figure 4.11 - AIN Instruction Block

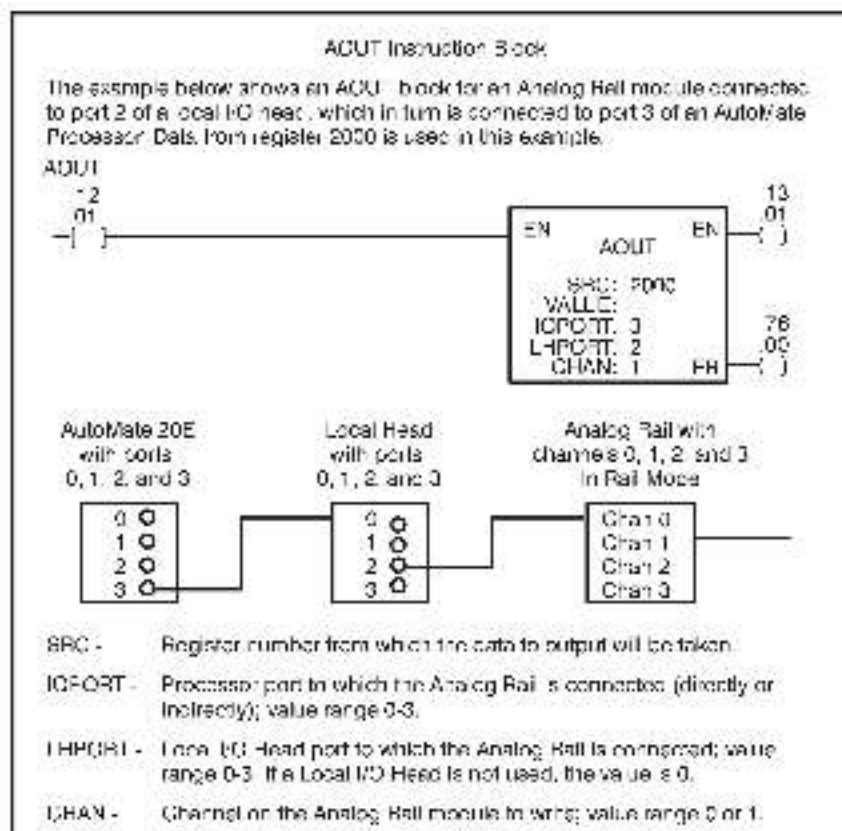


Figure 4.12 - AOUI Instruction Block

## 4.2 Analog Rail Module in DCS 5000/AutoMax Systems

This section describes how the Analog Rail module is used with DCS 5000/AutoMax systems.

### 4.2.1 Configuring the Analog Rail Module with a DCS 5000/AutoMax Remote I/O Head

The Analog Rail module is used in the Local Head mode when the host is a DCS 5000/AutoMax Remote I/O Head. For AutoMax Version 3.0 or later, the Analog Rail module is configured using the AutoMax Programming Executive. Refer to instruction manual J-3750 for more information. For DCS 5000 or AutoMax Version 2.1 or earlier, the module is defined in the configuration task for the master rack using the DCS 5000 or AutoMax Programming Executive software. See instruction manual J-3649 for more information on the configuration task.



For DCS 5000 or AutoMax Version 2.1 or earlier, use the RIODEF statement to define each channel on the Analog Rail module as a separate register. Note that, in addition to defining each channel as a register, you can also define the over-range and under-range bits for each channel separately. These bits can also be defined using the RIODEF statement. Use the following format for the RIODEF statement:

```
mmmm RIODEF name(MASTER_SLOT=m, DROP=d, SLOT=s, REGISTER=r, BIT=b)
```

where:

- mmmm - Configuration rack line number, (range 1-32767).
- name - Symbolic name of channel, ending with % (integer) for registers, @ (floats) for bits.
- m - Slot in rack containing DCS 5000/AutoMax master remote I/O module; range 0-15.
- d - Drop number of DCS 5000/AutoMax Remote I/O Head; range 1-7.
- s - Communication port on the DCS 5000/AutoMax Remote I/O Head to which the Analog Rail module or Local I/O Head is connected; range 0-3.
- r - Register number; range 0-3.
- b - Optional bit defining the bit position within the register number; (range 0-15).

#### 4.2.2 Configuring the Analog Rail Module with a Power Module Interface Processor Host

The Analog Rail module is used in the Rail mode when the host is a Power Module Interface (PMI) Processor. Beginning with AutoMax Version 3.3, the Analog Rail module is configured using the AutoMax Programming Executive. Refer to instruction manual J2-309b for more information.

#### 4.2.3 DCS 5000/AutoMax Programming

When programming the Analog Rail module, it is recommended that you monitor the state of the over-range and under-range bits for the input channels. You can check the status of the appropriate bits directly if they were defined in the configuration. You can also use the BASIC expression AND with the variable name assigned to the input channel to mask off the 12 bits of analog data and read the values in the over-range and under-range bits. Any non-zero result means that the value is out of range. See the following three statements for examples of how to detect values out of range. Use the hexadecimal values shown to mask off the analog data.

The value in the channel defined as CHANNEL\_2 is either over-range or under-range:

10000 RANGE - ERROR@ = CHANNEL\_2 AND 3000H

The value in the channel defined as CHANNEL\_2 is over-range:

11000 OVER\_ERROR@ = CHANNEL\_2 AND 1000H

The value in the channel defined as CHANNEL\_2 is under-range:

12000 UNDER\_ERROR@ = CHANNEL\_2 AND 2000H

## 5.0 DIAGNOSTICS AND TROUBLESHOOTING

### DANGER

THE REMAINING STEPS ARE MADE WITH POWER ON. EXERCISE EXTREME CAUTION BECAUSE HAZARDOUS VOLTAGE EXISTS. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.

### WARNING

ONLY QUALIFIED ELECTRICAL PERSONNEL FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THIS EQUIPMENT AND THE HAZARDS INVOLVED SHOULD INSTALL, ADJUST, OPERATE, AND/OR SERVICE THIS EQUIPMENT. READ AND UNDERSTAND THIS MANUAL IN ITS ENTIRETY BEFORE PROCEEDING. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY.

### WARNING

INSERTING OR REMOVING THIS PRODUCT OR ITS CONNECTING CABLES MAY RESULT IN UNEXPECTED MACHINE MOTION. POWER TO THE MACHINE SHOULD BE TURNED OFF BEFORE INSERTING OR REMOVING THE PRODUCT OR ITS CONNECTING CABLES. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY.

This section explains how to troubleshoot the Analog Hal module. If you cannot correct the problem using the instructions below, the unit is not user-serviceable.

### 5.1 Both LEDs on the Faceplate are Off

**Problem:** The "PWR OK" and "COM OK" LEDs on the faceplate are off. This problem can indicate that the unit is not receiving the +5V from the processor or Local or Remote Head, the 120 VAC or 24 VDC from the external power supply, or both within the specified ranges. This problem can also indicate that the power supply fuse (.75A or .25A) has blown or that the module is malfunctioning.

- Step 1:** Stop any application programs or tasks that are running. Use a voltmeter to measure the input power (120 VAC or 24 VDC) to the module. Verify that the power source is providing 120 VAC or 24 VDC, whichever is appropriate.

### DANGER

VOLTAGE IS PRESENT ON THE PLUG CONNECTOR TERMINALS. DISCONNECT THE POWER AT THE SOURCE BEFORE TOUCHING THE PLUG CONNECTOR TERMINALS. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.

#### **DANGER**

**DO NOT TOUCH THE CONNECTORS ON THE FACEPLATE IF THERE IS POWER ON THE WIRES ATTACHED TO THE PLUG CONNECTOR SCREW TERMINALS. ALWAYS TURN OFF POWER BEFORE HANDLING A CONNECTOR THAT IS WIRED. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.**

- Step 2. Turn off power to the module. Verify that the input power connector is connected securely to the faceplate. Verify that the I/O Rail cable connections are tight at both ends.
- Step 3. Turn on power to the module. If the LEDs are still off, try replacing the I/O Rail cable. Check that the input connector pins are not bent.
- Step 4. If the LEDs are still off, turn off power to the module and replace the power supply fuse on the front panel following the directions below.

#### **CAUTION**

**MAKE CERTAIN THAT THE ANALOG RAIL MODULE CONTAINS THE PROPER FUSE FOR THE POWER SUPPLY BEING USED. USE A .25 A FUSE FOR 120 VAC POWER AND A .75A FUSE FOR 24 VDC POWER. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN DAMAGE TO OR DESTRUCTION OF THE EQUIPMENT.**

- a) Use a screwdriver to release the fuse holder located on the Analog Rail module faceplate. Pull the fuse holder out of the module.
  - b) Take the old fuse out of the fuse holder and replace it with the new fuse. Use a .25A fuse for 120 VAC power and a .75A fuse for 24 VDC power. See Appendix A for the fuse type and rating.
  - c) Re-insert the fuse holder into the module. Turn the screwdriver clockwise while pressing down on the fuse holder. The fuse holder must be flush against the faceplate.
- Step 5. Turn on power to the module. If both LEDs still do not light, replace the module.

## **5.2 The "COM OK" LED Is Off**

**Problem:** The "COM OK" LED on the faceplate is off. This LED signifies whether there is communication between the Analog Rail and the host. The LED should be on if communication is taking place. The possible causes of this problem are incorrect configuration, a disconnected or malfunctioning I/O Rail cable, a malfunctioning host, or a malfunctioning Analog Rail module. After verifying that the configuration of the Analog Rail is correct, follow the steps below to isolate the problem.

- Step 1. Stop any application programs or tasks that are running and turn off power to the Analog Rail module.

**DANGER**

VOLTAGE IS PRESENT ON THE PLUG CONNECTOR TERMINALS. DISCONNECT THE POWER AT THE SOURCE BEFORE TOUCHING THE PLUG CONNECTOR TERMINALS. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.

**DANGER**

DO NOT TOUCH THE CONNECTORS ON THE FACEPLATE IF THERE IS POWER ON THE WIRES ATTACHED TO THE PLUG CONNECTOR SCREW TERMINALS. ALWAYS TURN OFF POWER BEFORE HANDLING A CONNECTOR THAT IS WIRED. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.

- Step 2: Verify that the connections on both ends of the I/O Rail cable are tight. Check that the input connector pins are not bent.
- Step 3: Turn on power to the module. The "I/O OK" LED should be illuminated if communication is taking place. If the LED still does not illuminate, turn off power to the module and replace the I/O Rail cable.
- Step 4: If applicable, try to reset the condition by disconnecting and then re-connecting the cable between the Host and the Local I/O Head, the AutoMax Remote I/O Head, or the DCS 5000/AutoMax Remote I/O Head. Troubleshoot the host if necessary. If the problem is still not corrected, replace the Analog Rail module.

## 5.3 Incorrect Data

**Problem:** The data (signal) being read or written is always on, always off, or different than expected. The possible causes of this problem are incorrect configuration, a programming error, a disconnected or malfunctioning I/O Rail cable, disconnected or malfunctioning wiring to the external hardware, malfunctioning external hardware or a malfunctioning Analog Rail module. After verifying that the configuration of the module is correct, follow the steps below to isolate the problem.

- Step 1: Verify that the application program(s) is correct. Check to see that the program is referencing the correct registers (AutoMax) or symbolic names (DCS 5000/AutoMax). In DCS 5000/AutoMax applications, make certain that the program is not attempting to write to the input channels. Verify that the data being output is within the specified limits.
- Step 2: Stop any application tasks that are running. Turn off power to the Analog Rail module.

- Step 3. Try to clear the condition by disconnecting and then re-connecting the I/O Rail cable. Make certain the connections are tight. If applicable, check the connections between the host and the Local I/O Head, the AutoMate Remote I/O Head, or the DCS 6000/AutoMax Remote I/O Head. Check that the input connector pins are not bent.
- Step 4. Turn off power to the external hardware. Verify that the wiring to the external hardware is tight and functioning correctly.
- Step 5. Turn on power to the external hardware. Before testing, make certain that the external hardware cannot respond to output signals from the Analog Rail module.
- For input channels, use the Executive software to read the value on the input channels. Use a voltmeter to read the input signal and compare the two. If the signal is being converted correctly, there is a problem with the external hardware or wiring.
- For output channels, use the Executive software to write a value between 0 and 4095 to the channels. Use a voltmeter to verify that the signal on the terminals is proportional to the value. If the signal is being converted correctly, there is a problem with the external hardware or wiring.
- Step 6. Troubleshoot the external hardware, the wiring, and the host.

## 5.4 Constant Under-Range

**Problem:** the under-range bit (12 decimal) on an input channel register is constantly set to 1. Assuming that the power supply for the external hardware connected to the input channels is providing an input signal within the specified limits (0-10V), the possible causes of this problem are incorrect (reversed) input signal wiring on the module faceplate, a loose connector on the analog I/O section of the faceplate, or loose or malfunctioning wiring. Follow the steps below to isolate the problem.

- Step 1. Stop any application tasks that are running. Turn off power to the external hardware connected to the module. Turn off input power (120 VAC or 24 VDC) to the module.
- Step 2. Verify that the 12-point connector on the analog I/O section of the module faceplate is securely attached to its mating half.
- Step 3. Verify that the signal wiring on the module faceplate is correct. See step 9 in section 3.2 for more information. Verify that the wiring is tight and functioning properly.

# Appendix A

## Technical Specifications

### Ambient Conditions

- Storage temperature:  $-40^{\circ}\text{C}$  to  $85^{\circ}\text{C}$   
 $-40^{\circ}\text{F}$  to  $185^{\circ}\text{F}$
- Operating temperature at the module:  $0^{\circ}\text{C}$  to  $60^{\circ}\text{C}$   
 $32^{\circ}\text{F}$  to  $140^{\circ}\text{F}$
- Humidity:  $\geq 90\%$  non-condensing

### Dimensions

- Height: 9.25 inches (23.5 cm)
- Width: 2.91 inches (7.5 cm)
- Depth: 7.75 inches (19.1 cm including plug-in connectors)
- Weight: 4.5 lbs (2.1 kg)

### Maximum Recommended Cable Length for Analog Signal Wiring

- 60 feet (Delcon 8761 or equivalent type)

### Maximum Power Dissipation

- 4.5 Watts

### Communication Power Requirements

- +5V: 250 mA (supplied by host through PC Rail cable)

### Analog Circuit Power Supply

(Use either 120 VAC or 24 VDC supply)

- 120 VAC supply: 92 ~ 132V acceptable range (+15%/-20%)  
Maximum current: 150 mA
- 24 VDC supply: 20 ~ 32V acceptable range (+33%/-16%)  
Maximum current: 350 mA

### Fuse Types and Rating

- MDO 250 VAC .25A (for 120 VAC power)
- MDO 250 VAC .75A (for 24 VDC power)

### Maximum Source KVA

- 10

## Appendix A (Continued)

### Input Channels

- Operating range: 0 - 10 VDC
- Number of channels: 2 (angle-ended)
- Number of commons: 1 (shared among all 4 channels)
- Resolution: 12 bits binary
- Non-linearity:  $\pm 1$  LSB maximum
- Accuracy:  $\pm 0.03\%$  of full scale at 25°C maximum
- Thermal drift:  $\pm 50$  ppm/degree C
- Type of converter: Successive approximation
- Speed of conversion: 13  $\mu$ sec
- Impedance: 100K Ohm  $\pm 0.2\%$
- Input filter: 2nd order 160Hz low pass
- Input overvoltage protection:  $\pm 15$  VDC continuous
- Isolation of analog section from host and input power: 2500V RMS


### Output Channels

- Operating range: 0 - 10 VDC (short-circuit protected)
- Number of channels: 2 (angle-ended)
- Number of commons: 1 (shared among all 4 channels)
- Resolution: 12 bits binary
- Non-linearity:  $\pm 1$  LSB maximum
- Accuracy:  $\pm 0.06\%$  of full scale at 25°C maximum
- Thermal Drift: 20 ppm/degree C
- Type of converter: 2 independent DACs on a monolithic IC
- Speed of conversion: Scan Dependent
- Maximum output current: 20 mA at 10V output
- Output settling time: 100  $\mu$ sec, max load: 10K Ohm  $\times$  100pF load
- Minimum load resistance: 500 Ohms
- Maximum load capacitance: 1000 pF maximum including cabling capacitance to field device
- Isolation of analog section from host and input power: 2500V RMS



## Appendix B

### Block Diagram

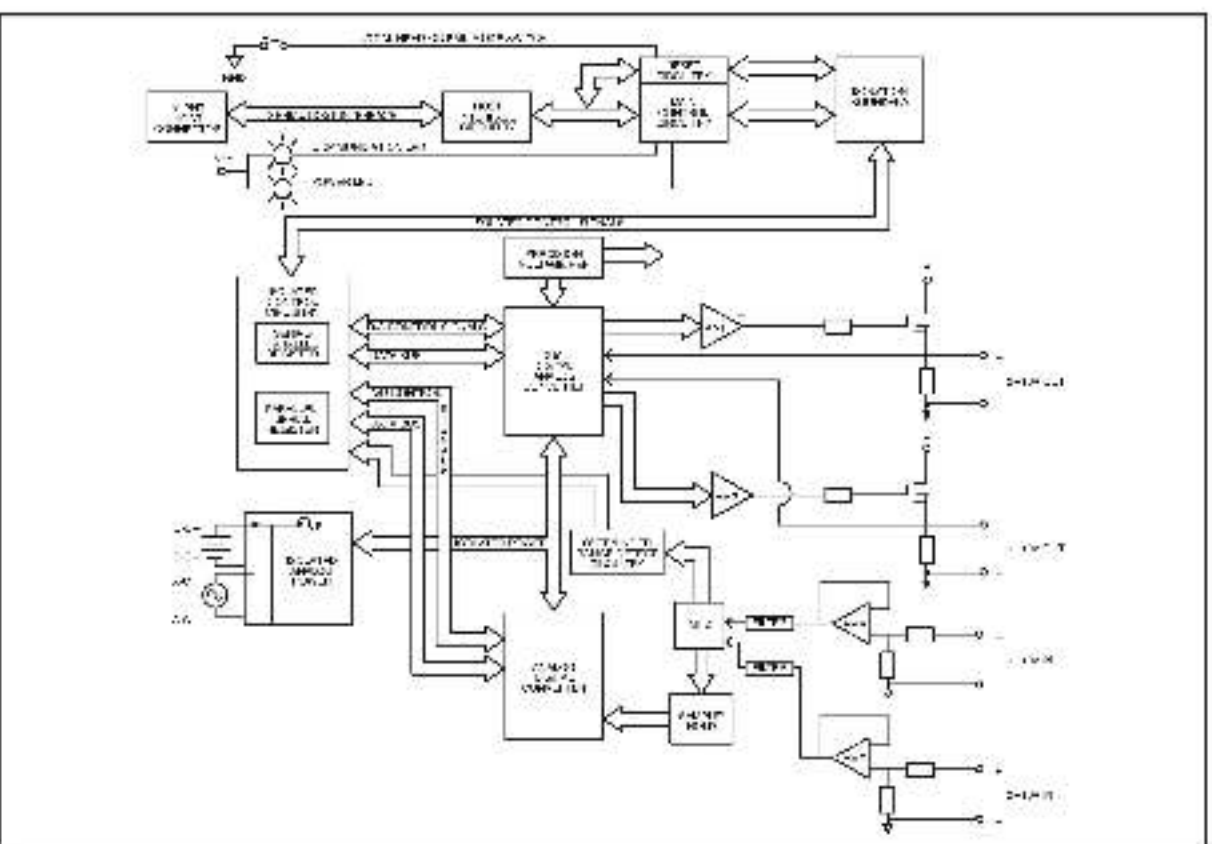



# Appendix C

## Sample AutoMate Program


The following AutoMate program sequence can be used to interface to an AutoMate Processor that does not support the AN or AOUT blocks. Over a period of four scans, the program below maps registers 40 through 43 to the four channels of an Analog Rail module in Rail mode.

### Registers Used


|    |   |
|----|---|
| 0  | Register that is configured to be updated at the end of scan. |
| 10 | Value to output to channel 0                                  |
| 41 | Value as input to channel 1                                   |
| 42 | Value as input to channel 2                                   |
| 43 | Value as input to channel 3                                   |
| 44 | Counter to select channel to operate this scan                |
| 45 | Coils   |

### Beginning of the Scan

If channel 2 was selected at the end of last scan, read the data that has now come back into register 42. The channel select bits are cleared, but the under-range and over-range bits are left for later testing.

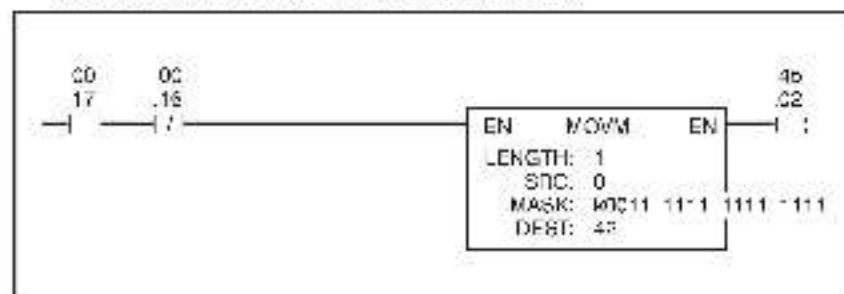


If channel 3 was selected at the end of last scan, read the data that has now come back into register 43. The channel select bits are cleared, but the under-range and over-range bits are left for later testing.

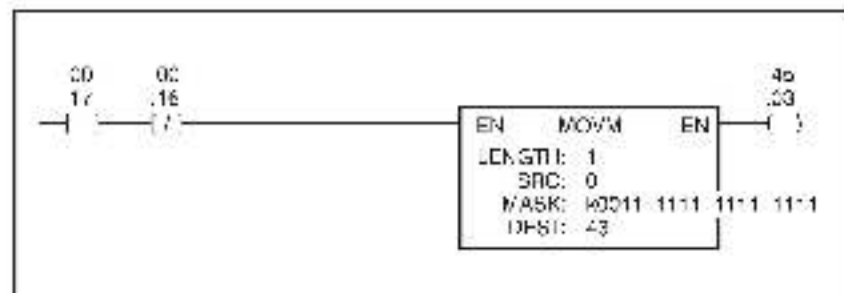


## Appendix C (Continued)

At the End of the Scan


If counter = 0, MOVE register 40 to register 0 for output.

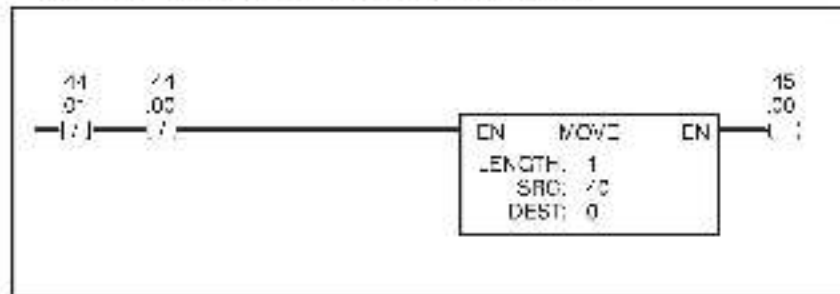

If counter = 1, MOVE register 41 to register 0 for output.

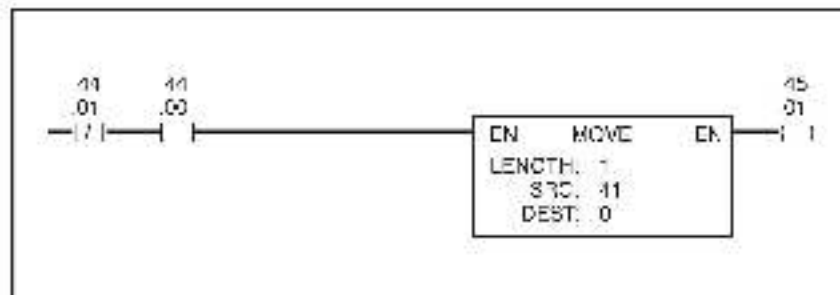


Move counter to two most significant bits of output register to select which channel to update.

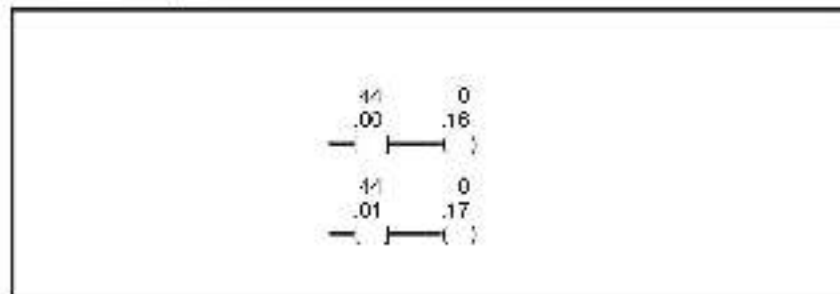

## Appendix C (Continued)

Increment counter 0, 1, 2, 3 and then back to 0 and so on

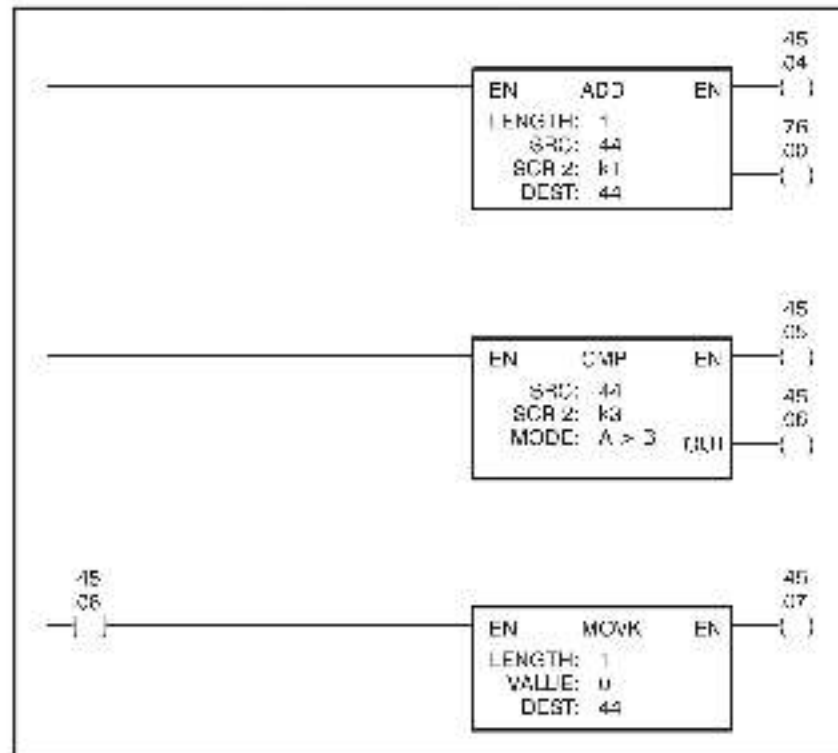





## For additional information

1 Allen-Bradley Drive

Mayfield Heights, Ohio 44124 USA

Tel: (800) 241-2886 or (440) 646-3599

<http://www.reliance.com/automax>

[www.reliance.com/automax](http://www.reliance.com/automax)

### Corporate Headquarters

Reliance Automation, 1 Allen-Bradley Drive, Mayfield Heights, OH 44124 USA, Tel: (440) 646-3599, Fax: (440) 646-3599

### Representatives for Allen-Bradley Products, Rockwell Automation Products and Global Manufacturing Solutions

Reliance Automation, 1 Allen-Bradley Drive, Mayfield Heights, OH 44124 USA, Tel: (440) 646-3599, Fax: (440) 646-3599  
Reliance Automation, 1 Allen-Bradley Drive, Mayfield Heights, OH 44124 USA, Tel: (440) 646-3599, Fax: (440) 646-3599  
Reliance Automation, 1 Allen-Bradley Drive, Mayfield Heights, OH 44124 USA, Tel: (440) 646-3599, Fax: (440) 646-3599

### Representatives for Dodge and Rockwell Automation Products

Reliance Automation, 1 Allen-Bradley Drive, Mayfield Heights, OH 44124 USA, Tel: (440) 646-3599, Fax: (440) 646-3599  
Reliance Automation, 1 Allen-Bradley Drive, Mayfield Heights, OH 44124 USA, Tel: (440) 646-3599, Fax: (440) 646-3599  
Reliance Automation, 1 Allen-Bradley Drive, Mayfield Heights, OH 44124 USA, Tel: (440) 646-3599, Fax: (440) 646-3599

Reliance Automation, 1 Allen-Bradley Drive, Mayfield Heights, OH 44124 USA, Tel: (440) 646-3599, Fax: (440) 646-3599

Copyright © 2002 Rockwell Automation Inc. All rights reserved. Printed in U.S.A.