

Field Supply Kit for Regenerative MinPak Plus DC Drives

Model Number 14C238

Instruction Manual D2-3381



ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, and/or service this equipment. Read and understand this manual and other applicable manuals in their entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.

Product Description

The Field Supply kit provides field excitation for shunt-wound DC motors used with 1/4 to 1-1/2 HP regenerative MinPak™ Plus DC drives. The kit is an assembly consisting of a terminal block, a field power cube, two wiring harnesses, a support bracket, and mounting hardware.

The user must provide appropriate Field Supply wiring to the motor, based upon the motor's field rating.

The contents of the Field Supply kit are listed in table 1.

Table 1 – Contents of the Field Supply Kit

Description	Quantity	Part Number
Field Supply Power Cube	1	701819-12AD
Terminal Block 3TB	1	69351-102RB
Support Bracket	1	608885-14B
Wire Harness 51/52	1	608813-81S
Wire Jumper F1	1	608808-53TD
Wire Jumper F2	1	608808-53TE
Instruction Manual	1	D2-3381

Installing the Field Supply



ATTENTION: Do not install modification kits with power applied to the drive. Disconnect, lock out, and tag all sources of incoming AC power to the drive before attempting such installation. Verify that no voltage is present at the drive's AC input terminals, L1/181 and L2/182. Failure to observe this precaution could result in severe bodily injury or loss of life.

ATTENTION: The user is responsible for conforming with all applicable local, national, and international codes. Failure to observe this precaution could result in damage to, or destruction of, the equipment.

ATTENTION: This kit contains ESD (Electrostatic Discharge) sensitive parts and assemblies. Static control precautions are required when installing, testing, servicing, or repairing this assembly. Failure to observe these precautions could result in damage to, or destruction of, the equipment.

Refer to your MinPak Plus DC drive instruction manual for help locating and identifying drive components.

To install the Field Supply in your regenerative MinPak Plus DC drive:

- Step 1. Disconnect, lock out, and tag input power to the drive.
- Step 2. Remove the drive cover.
- Step 3. Verify that no voltage is present at the drive's AC input terminals, L1/181 and L2/182.
- Step 4. Fasten the field supply support bracket to the top of the drive's circuit breaker bracket using the four screws that secure the circuit breaker.
- Step 5. Connect wire harness 51/52 to terminal block 2TB in the upper left corner of the drive. Connect wires F1 and F2 from the field supply to terminal block 3TB on the Field Supply mounting bracket.
- Step 6. Route the user-supplied motor field wires (F1 and F2) into the drive chassis. You can use the same conduit as the armature and motor thermostat conductors. Refer to the section on DC wiring in your MinPak Plus DC drive instruction manual.
- Step 7. **For a full-wave supply**, connect the motor field wires to terminals F1 and F2 on Field Supply terminal block 3TB. See figure 1.
For a half-wave supply, connect motor lead F1 to terminal 51 on 2TB and motor lead F2 to terminal F2 on 3TB. See figure 2.

Refer to the motor's nameplate label and the technical specifications at the end of this instruction manual to determine the appropriate field type required.

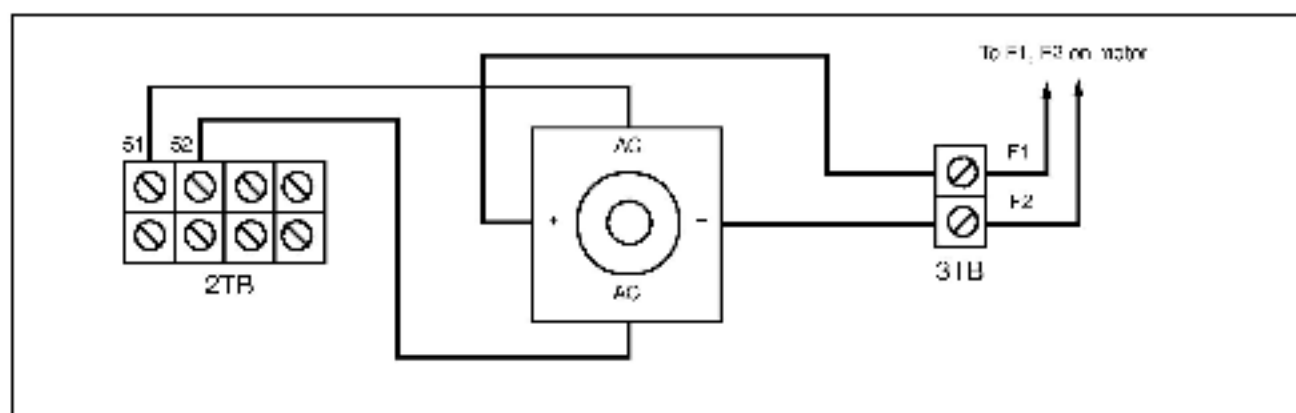


Figure 1 – Connecting the Field Supply (Full-wave)

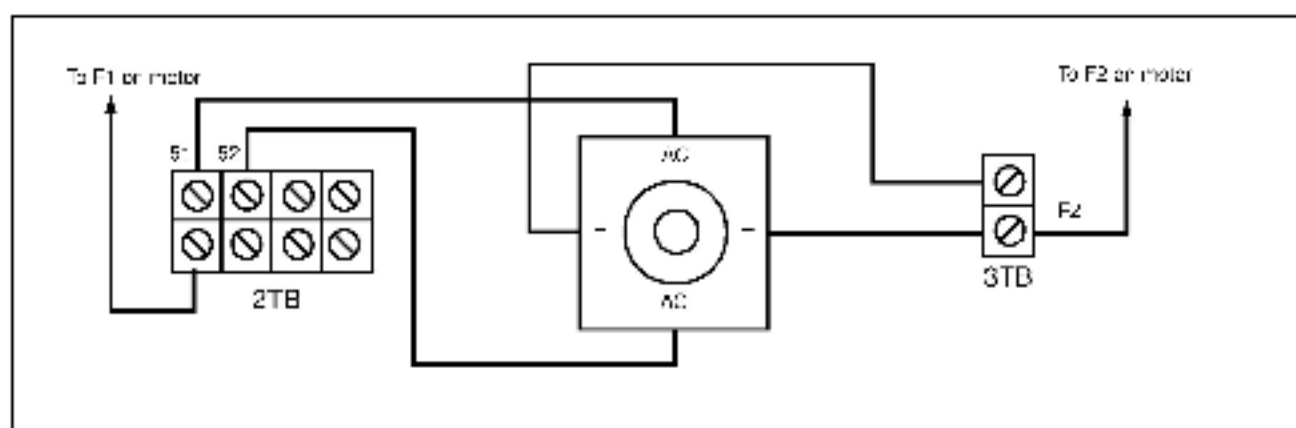


Figure 2 – Connecting the Field Supply (Half-wave)

Step 8. Verify that the wiring of the Field Supply is correct and all connectors are securely fastened.

Step 9. Reattach the cover to the drive.

Step 10. Apply power and test the operation of the drive.

This completes installation of the Field Supply kit.

Technical Specifications

AC Line Voltage (VAC)	Field Supply Voltage Output (VDC)		Field Supply Current Output (Amps)
	Full-wave	Half-wave	
115	100	50	3.0
230	200	100	3.0

Reach us now at www.rockwellautomation.com

Wherever you need us, Rockwell Automation brings together leading brands in industrial automation including Allen-Bradley controls, Reliance Electric power transmission products, Dodge mechanical power transmission components, and Rockwell Software. Rockwell Automation's unique, flexible approach to helping customers achieve a competitive advantage is supported by thousands of authorized partners, distributors and system integrators around the world.

Americas Headquarters, 1701 South Second Street, Milwaukee, WI 53204, USA Tel: (1) 414 387-7000 Fax: (1) 414 387-4444
European Headquarters SA/NV, Avenue Van Nieuwstraten 48, 1180 Brussels, Belgium Tel: (32) 2 883 03 00 Fax: (32) 2 883 06 40
Asia Pacific Headquarters, 27/F, C-Sharp Centre, 18 Whitefield Road, Causeway Bay, Hong Kong Tel: (852) 2887 4785 Fax: (852) 2506 1876



**Rockwell
Automation**